



Amazon shop



eBay shop

Jiangsu East Musical Instrument Co.,Ltd
 Chengji Town Lianshui County Jiangsu Province,China
 Phone: +86-510-86397535 / 86383008 Fax: +86-510-86384221
 Email: easttop@vip.163.com bee-harmonica@vip.163.com
 Internet : www.bee-harmonica.com
 Wechat: 15806161626 18906161626
 Facebook: www.facebook.com/EasttopHarmonica

Easttop®

HARMONICA PROFESSIONAL MANUFACTURE




10HOLE DIATONIC INSTRUCTIONS

IMPORTANT! READ BEFORE USE
KEEP IN SAFE PLACE FOR FUTURE REFERENCE




C key										
blow	1	3	5	1	3	5	1	3	5	1
draw	2	5	7	2	4	6	7	2	4	6
Paddy										
blow	1	3	6	1	3	5	1	3	5	1
draw	2	5	7	2	4	6	7	2	4	6
Melody Maker										
blow	1	3	6	1	3	5	1	3	5	1
draw	2	5	7	2	4	6	7	2	4	6
Country										
blow	1	3	5	1	3	5	1	3	5	1
draw	2	5	7	2	4	6	7	2	4	6
Yangle										
blow	1	2 [#]	5	1	2 [#]	5	1	3	5	1
draw	2	5	7	2	4 [#]	6	6 [#]	2	4	6

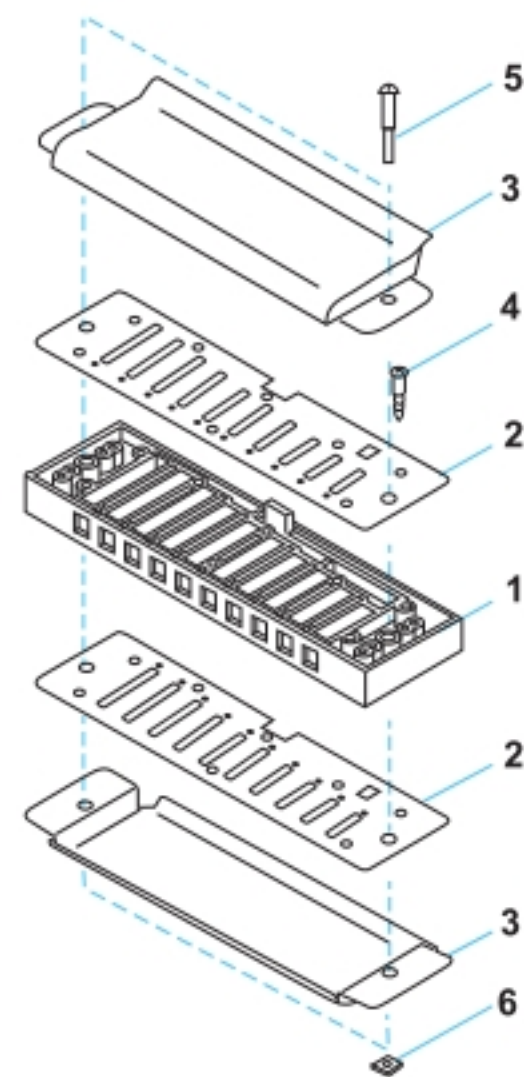

- 1.comb
- 2.Reedplate
- 3.Cover
- 4.Reedplate fixture
- 5.Upper cover fixture
- 6.Screw nut

Holding form

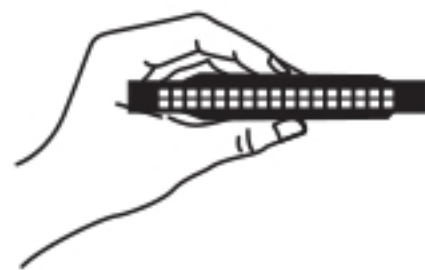

Hold the left of harmonica, the bass part of the harmonica is at the left end, hold the harmonica with the index finger and thumb, and the rest of the fingers and the index finger naturally close together to form a natural arc; The left end of the harmonica is against the tiger's mouth, but don't be too nervous. The right hand is usually naturally relaxed. Use your index finger to gently lean against the right end of the harmonica to support it. It can also be buckled on the left hand like a cup. The wrist part can be used as a fulcrum to open and close naturally, so that you can learn all kinds of hands skills in the future.



PLAYING
There are 2 ways to play single notes on the harmonica.

Whistle Style

Position your mouth as if to whistle, and carefully align the round opening of the lips at the tone hole desired. In this style the mouth is moved to the tone hole desired and the harmonica is generally held in a stationary position.

Tongue Assist Style

Position your mouth on the harmonica so that your lips cover 4 tone holes. Then use your tongue to cover the 3 tone holes on the left side, so that the 4th tone hole (right side) is open. In this style the harmonica is side to the right or left while holding your mouth and tongue in the same position.

Maintenance tips

- Don't eat while playing the harmonica
- Do not drink high-viscosity, high-alcohol beverages before playing the harmonica
- Rinse before playing, it is best to brush your teeth.
- Gently shoot the saliva from the holes after playing
- Put the harmonica in a dry place (in the harmonica box) after playing
- Don't lend a harmonica to someone else or borrow a harmonica from someone else to avoid the spread of the disease.